

COMBINATION METER ASSY OVERHAUL


710LQ-01

NOTICE:

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.


HINT:

- Installation is in the reverse order of removal.
 - COMPONENTS: SEE PAGE 71-1
- 1. REMOVE INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY
(SEE PAGE 71-7)**

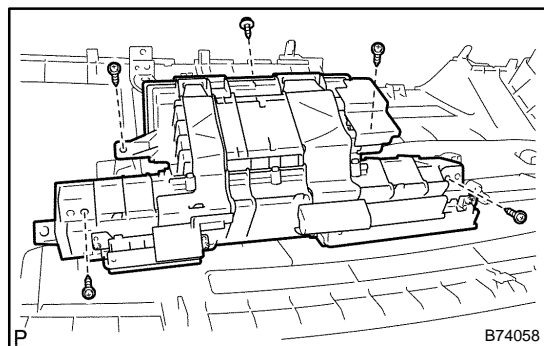


2. REMOVE COMBINATION METER ASSY


- (a) Remove the 5 screws and then the combination meter assy.

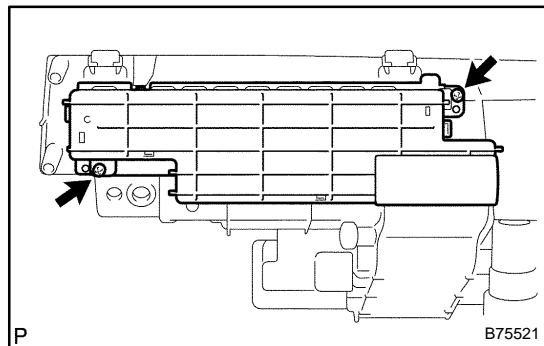

3. REMOVE COMBINATION METER COVER NO.1

- (a) Remove the 2 screws.
- (b) Disengage the 2 claws and then remove the combination meter cover No.1.

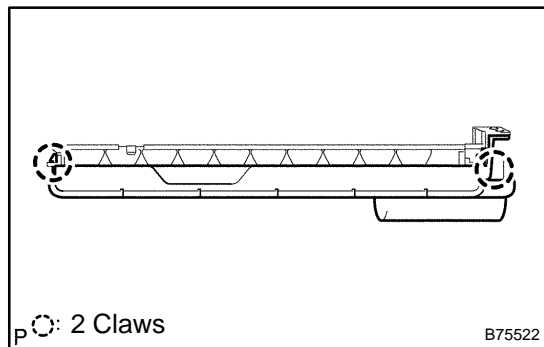

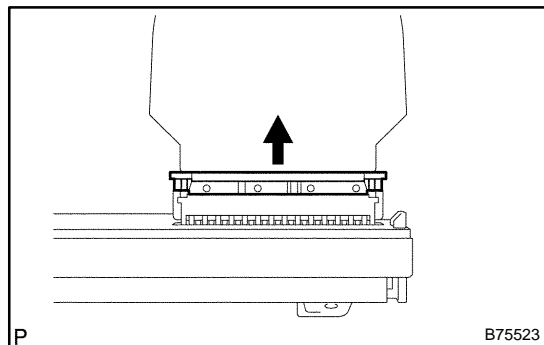


4. REMOVE METER CIRCUIT PLATE

NOTICE:


When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

- (a) Pull the connector lock in the direction indicated by the arrow in the illustration and separate the meter circuit plate No.3 from the meter circuit plate.

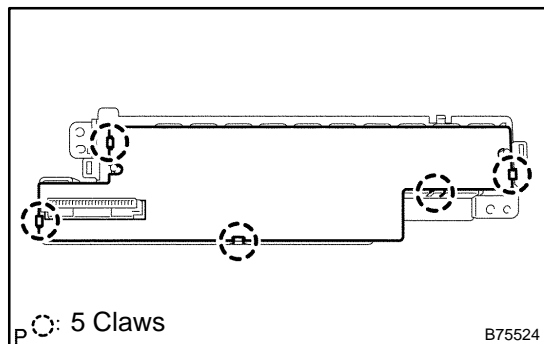

- (b) Disengage the 5 claws and then remove the meter circuit plate.

5. REMOVE COMBINATION METER CASE NO.2

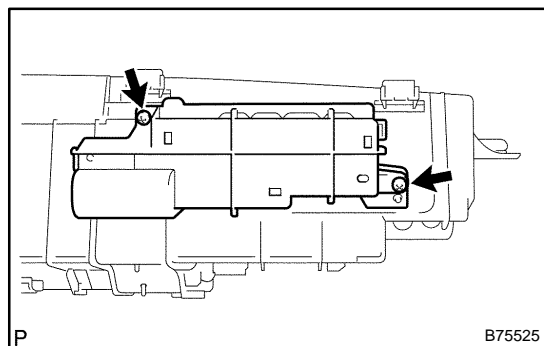


6. REMOVE COMBINATION METER COVER NO.2


NOTICE:

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

- (a) Remove the 2 screws.

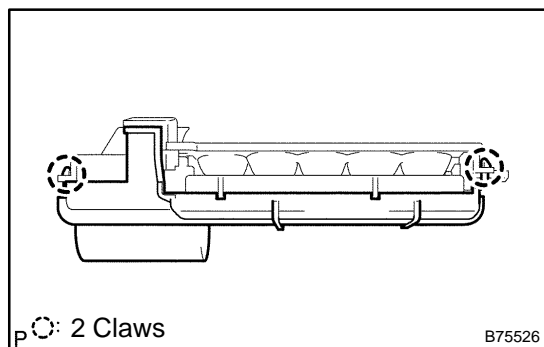

- (b) Disengage the 2 claws and then remove the combination meter cover No.2.

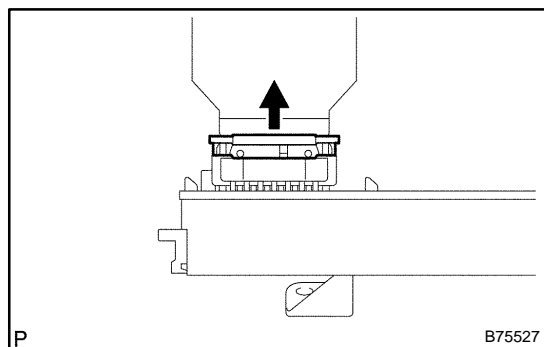


7. REMOVE METER CIRCUIT PLATE NO.2

NOTICE:


When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

- (a) Pull the connector lock in the direction indicated by the arrow in the illustration and separate the meter circuit plate No.4 from the meter circuit plate No.2.

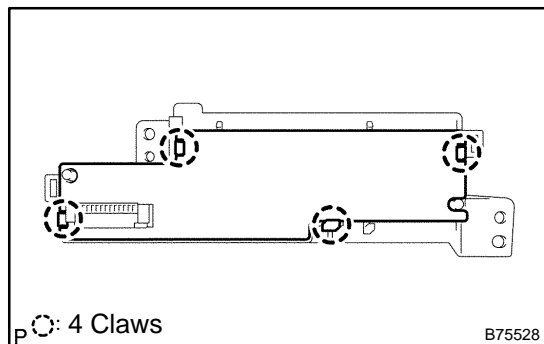


- (b) Disengage the 4 claws, and then remove the meter circuit plate No.2.

8. REMOVE COMBINATION METER NO.3 CASE

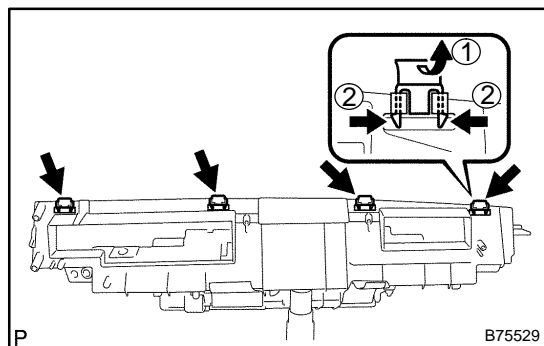


9. REMOVE COMBINATION METER REFLECTOR NO.1


- (a) Remove the 4 clips.

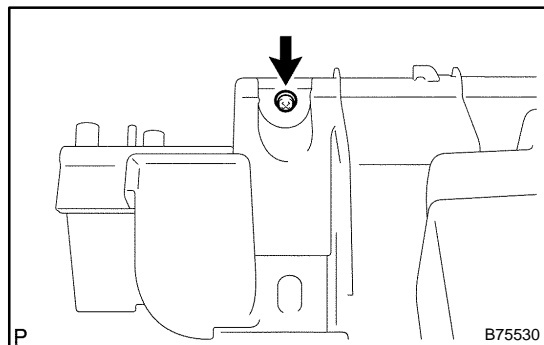

- (b) Remove the screw and then the combination meter reflector No.1.

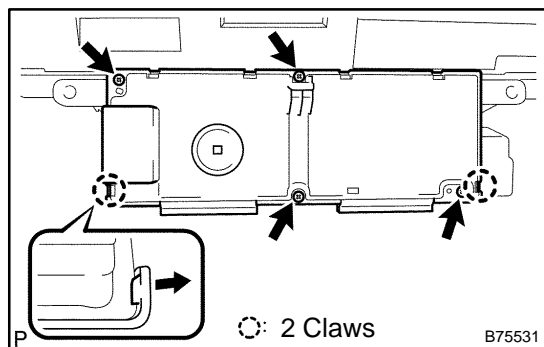
**10. REMOVE COMBINATION METER COVER NO.3**

- (a) Remove the 4 screws.
- (b) Widen the 2 claws along the outside to disengage them.
- (c) Raise the cover from the bottom and remove the combination meter reflector No.1.

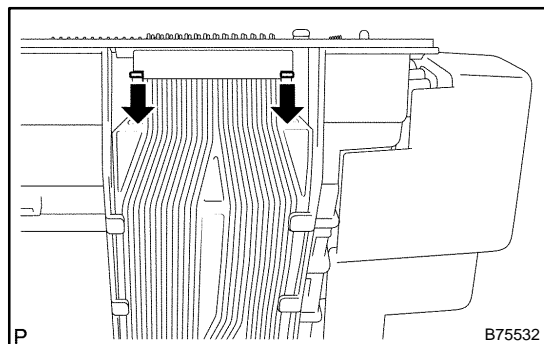**11. REMOVE METER CIRCUIT PLATE NO.3****NOTICE:**

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

- (a) Pull the connector lock in the direction indicated by the arrow in the illustration, and remove the meter circuit plate No.3.

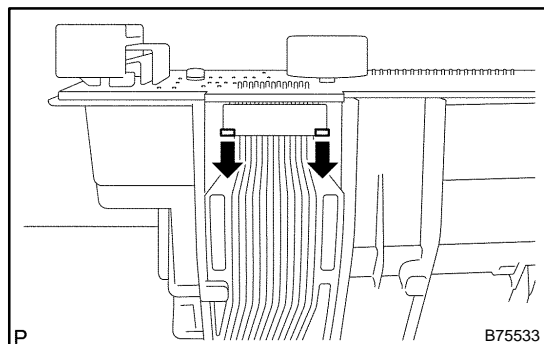**12. REMOVE METER CIRCUIT PLATE NO.4****NOTICE:**

When disassembling the combination meter assy, eliminate static electricity by touching the vehicle body to prevent the components from being damaged.

- (a) Pull the connector lock in the direction indicated by the arrow in the illustration, and remove the meter circuit plate No.4.

13. REMOVE COMBINATION METER CASE**14. INSTALL INSTRUMENT PANEL SUB-ASSY W/PASSENGER AIRBAG ASSY
(SEE PAGE 71-7)**